ARAT Telephone mount

Type: Mercedes W203 + CL203
"C" Class

Part No: 1003.4

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

XXXX this installation consists of 2 PAGES XXXX

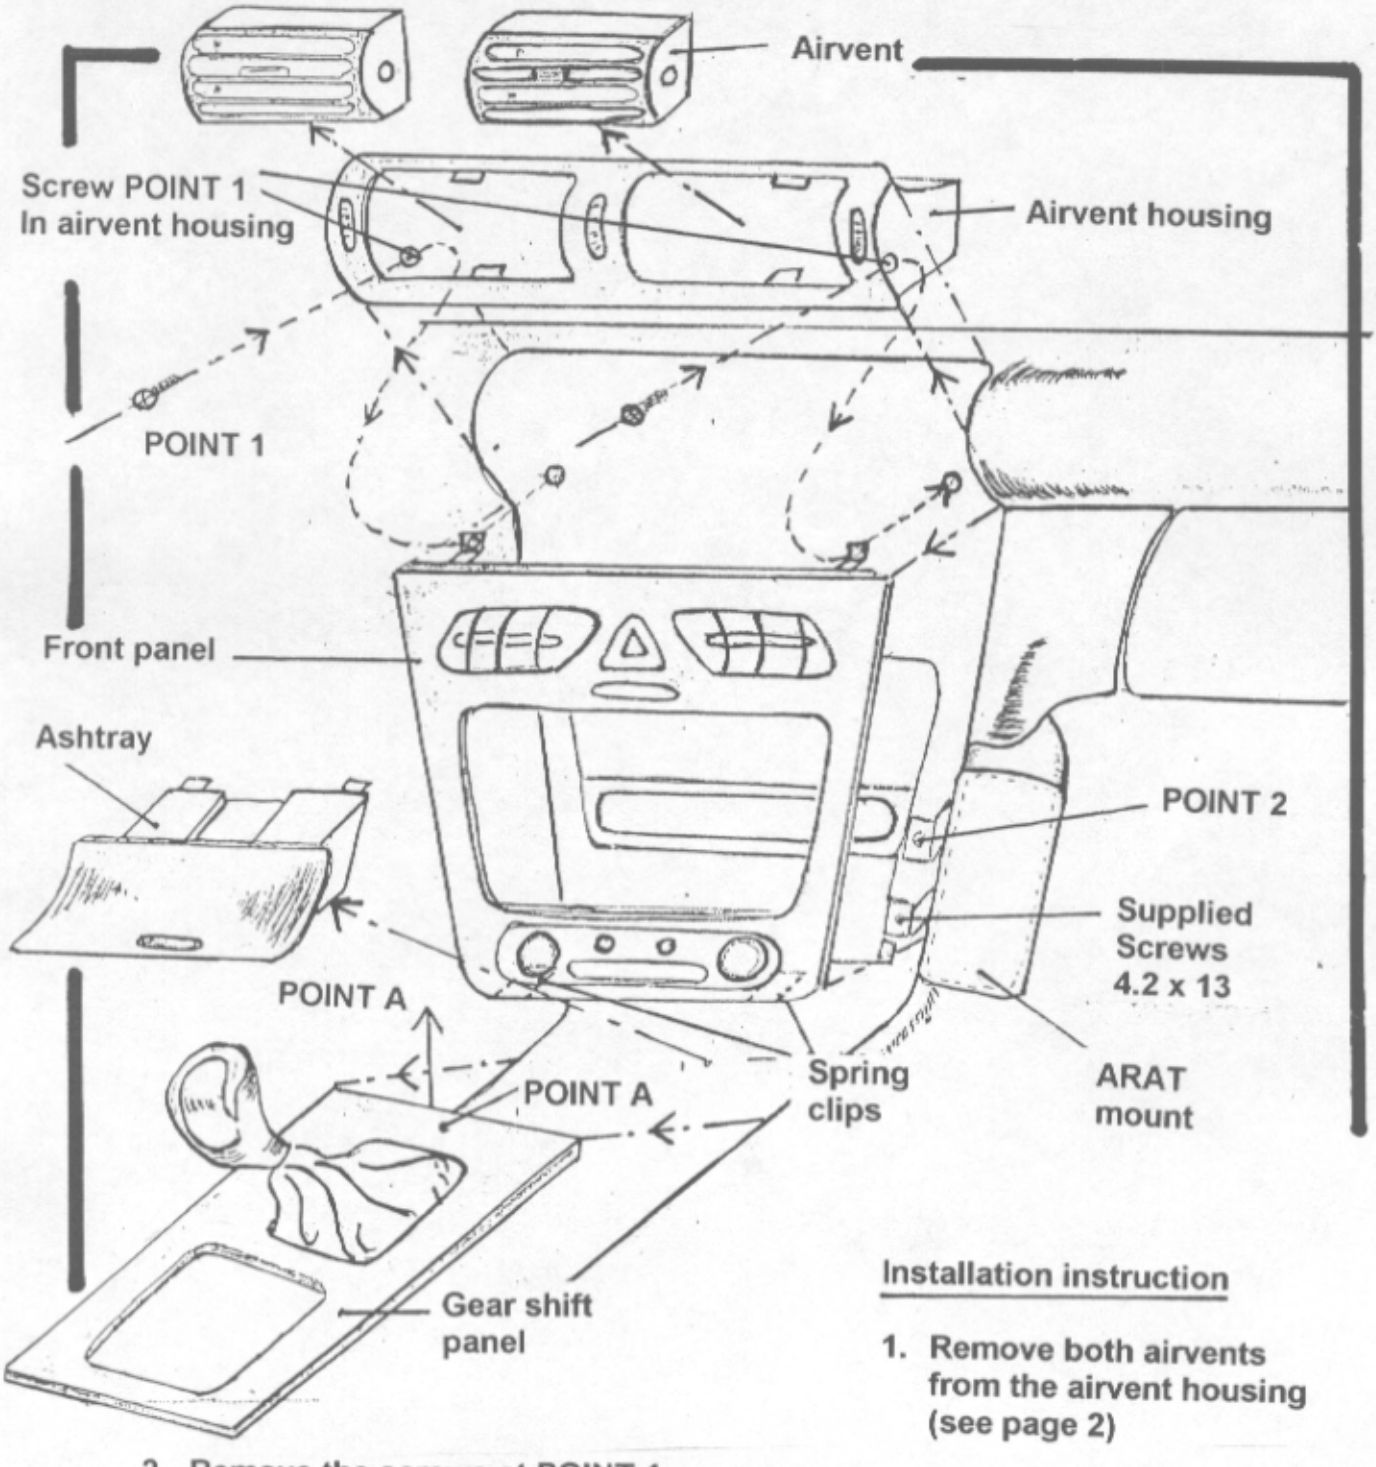

Installation instruction

1. Remove both airvents from the airvent housing (see page 2)
2. Remove the screws at POINT 1 and remove the airvent housing (move the locating clips 2 at top + 2 at bottom)
3. Pull the gearshift panel upwards at POINT A, and move it rearwards
4. Remove the ashtray (it is only a press fit)
5. Pull the spring clips of the front panel downwards, and remove the front panel

PAGE 2 to Installation for

ARAT Telephone mount

Type: Mercedes W203 + CL203
"C" Class

Part No: 1003.4

6. Remove the screw at POINT 2, and place the ARAT mount to the contours of the dashboard
7. Replavce the screw at POINT 2 through the top metal bracket of the ARAT mount, and the supplied screw through the bottom mount (pre-drill Ø 2mm)
8. Replace the Front panel, ashtray, gearshift panel, airvent housing, screws at POINT 1, and the airvent

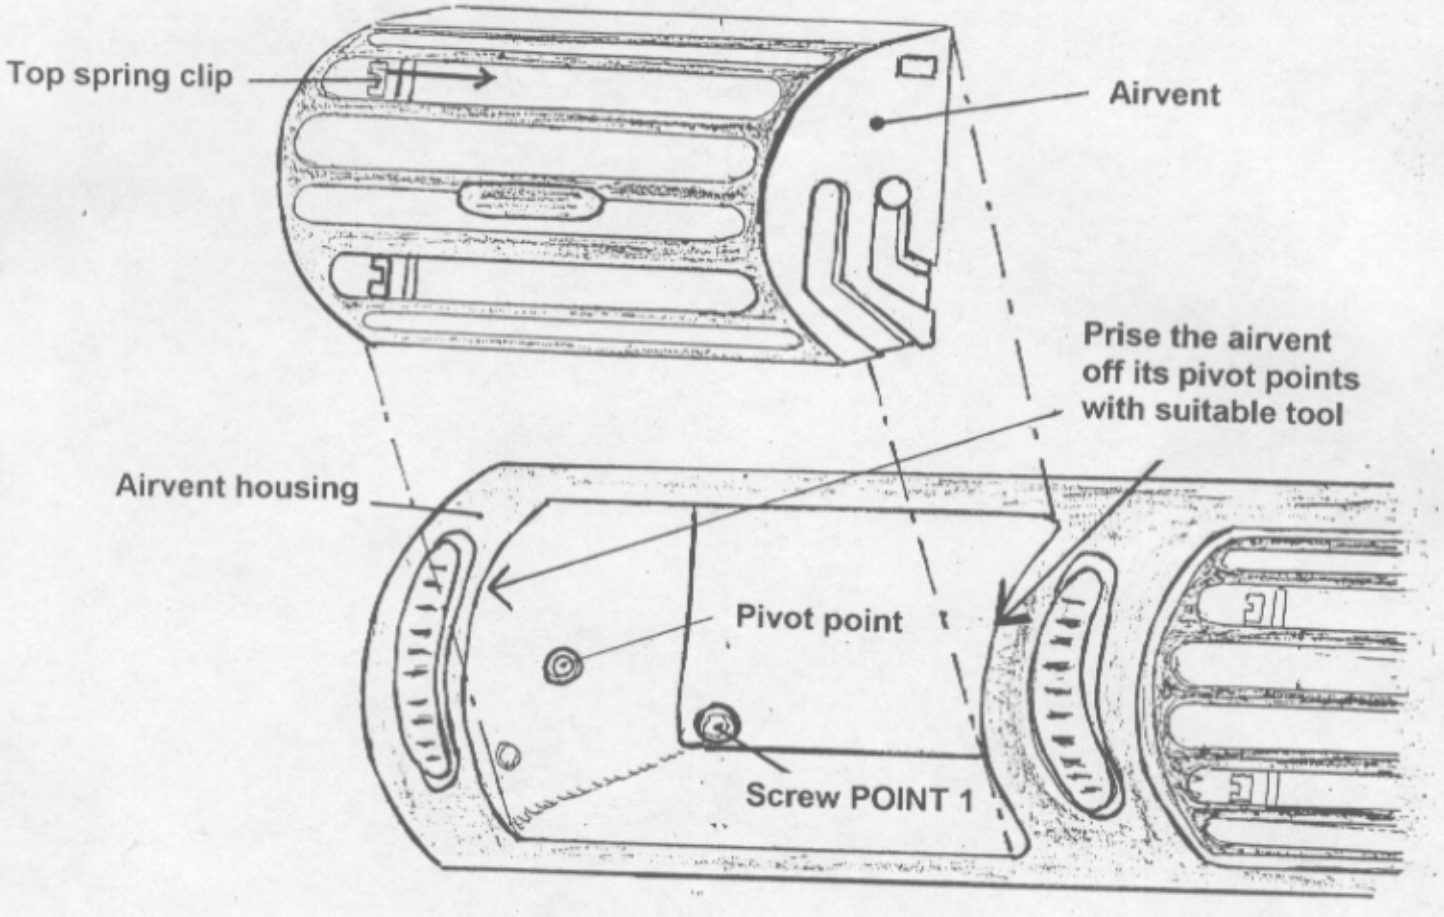

Removal of airvent

1. Prees the top spring clip in the vent inwards and swing the airvent downwards
2. Prise the airvent from left and right side and remove the airvent from its pivot points
3. Swing the airvent downwards and remove it from the airvent housing